


NO.	REVISION/ISSUE	DATE

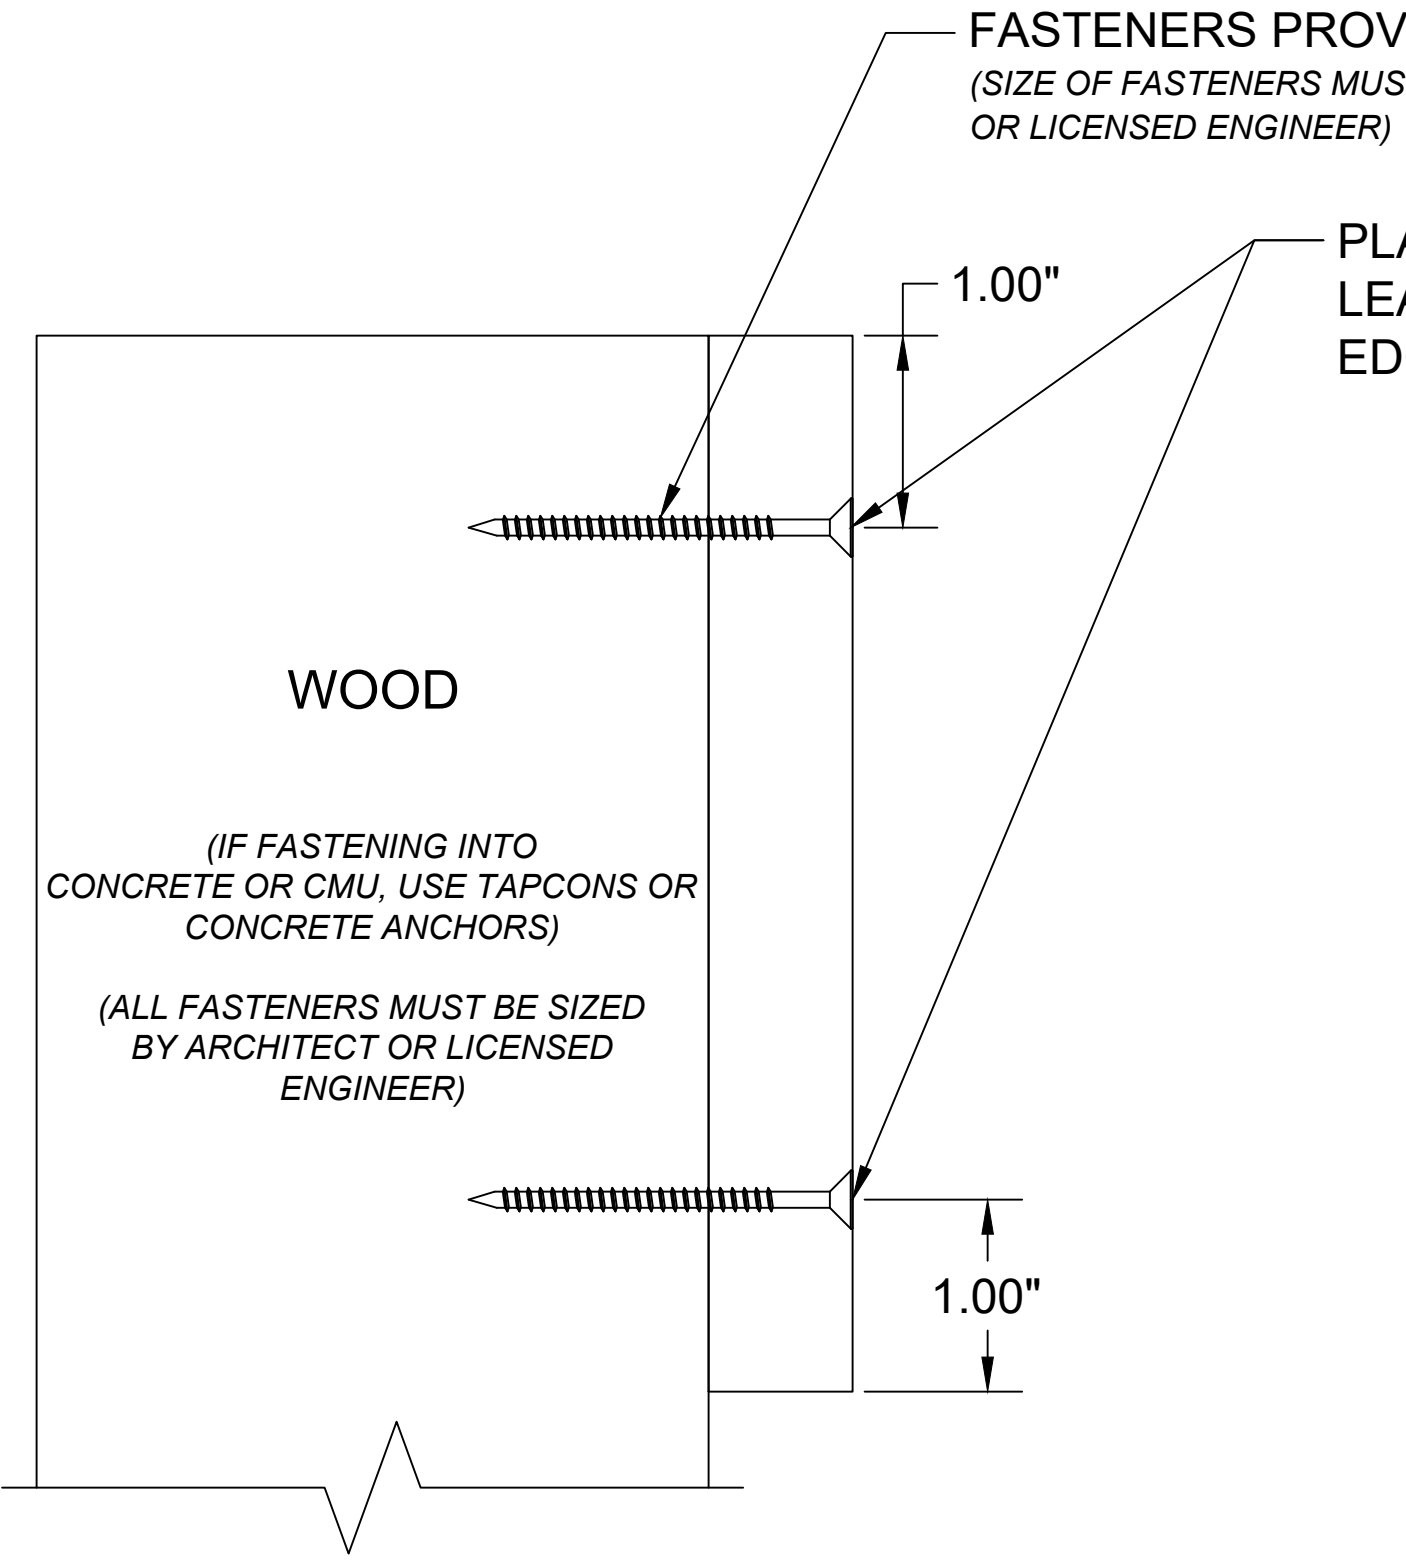

FASTENERS PROVIDED BY INSTALLERS
 (SIZE OF FASTENERS MUST BE VERIFIED BY ARCHITECT
 OR LICENSED ENGINEER)

**PLACE FASTEN AT
 LEAST 1" IN FROM
 EDGE OF BOARD**

WOOD

(IF FASTENING INTO
 CONCRETE OR CMU, USE TAPCONS OR
 CONCRETE ANCHORS)
 (ALL FASTENERS MUST BE SIZED
 BY ARCHITECT OR LICENSED
 ENGINEER)

NOTES:

- Must pre-drill prior to installing fastener into Lamboo.
- Even using a self-drilling fasteners
- For exterior applications, stainless steel fasteners are the preferred option.
- Avoid ceramic or coated fasteners
- Insert fastener flush or slightly below face of board.
- For exterior applications, use exterior silicone in hole prior to installing fastener.
- For exterior applications, apply touch-up finish over all fasteners to help with sealing of board.
- When installing boards onto a wall, be sure to use a WRB or Vapor Barrier between the boards and the wall.
- For interior applications, common wood screws, decorative fasteners, and air nails can be used.
- Maximum thickness of material that can be air nailed is $\frac{3}{4}$ ".
- Start at 110 psi when air nailing. Adjust accordingly.

BY SIGNING THIS DOCUMENT YOU THE CUSTOMER HAVE AGREED TO THE INFORMATION AS STATED IN THIS DOCUMENT.
 ANY CORRECTIONS REQUESTED AFTER DRAWINGS HAVE BEEN APPROVED WILL BE CHARGED BY LAMBOO ON AN HOURLY
 BASIS. SIGNATURE: _____

TITLE: FACE FASTENING DETAILS

DRAWN BY: JDH	1
DATE: 07/24/2024	
SCALE: 1:1	



301 W. EDWARDS STREET/LITCHFIELD, IL 62056 P:866-966-2999 E:SALES@LAMBOO.US W: WWW.LAMBOO.US
 DISCLAIMER:
 ALL INFORMATION CONTAINED WITHIN THIS DOCUMENT IS SOLE PROPERTY OF LAMBOO TECHNOLOGIES, LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION
 OF LAMBOO TECHNOLOGIES, LLC IS STRICTLY PROHIBITED.